

EH45e

Quick Start Guide

E-Series Ethernet Radios

Introduction

Welcome to the Quick Start Guide for the EH45e Hot Standby Base / Repeater Ethernet Radio. This section provides additional step-by-step instructions to install, commission and operate the EH45e Hot Standby Base Station. This document should be read in conjunction with the EB45e Base Station Quick Start Guide.

The EH45e is a fully redundant, hot standby digital data radio base / repeater station providing automatic changeover facilities.

The EH45e is designed as a modular solution, comprising 2 identical EB45e base station units (standard) linked to a central, fail-safe monitoring and changeover controller (Hot Standby Controller). Either base station may be taken out for maintenance without the need for any system down time. The automatic changeover is triggered by out of tolerance (alarm) conditions based on either RF and/or user data throughput parameters.

Features and Benefits

- Two identical base stations with a separate control logic changeover panel
- Base stations are hot swappable without user downtime
- Flexible antenna options – single, separate Tx & Rx, two Tx and two Rx
- Increased sensitivity with receiver pre-amplifier
- Both on-line and off-line units monitored regardless of active status
- Also refer to the common Features and Benefits list of the E Series Ethernet Radio



Operational Description

The Hot Standby Controller (HSC) unit is a 1RU rack mounted module that interfaces to two separate base stations (each 2RU rack mounted modules) via a number of RF and data cables.

Both base stations are operating simultaneously and both units are constantly receiving signals, however only data from one base station, the "online" base station is directed to the user equipment. The online base station is the only base station transmitting at any time. The Hot Standby Controller has the following functions:

- Duplex the transmit and receive paths (Assuming internal duplexer fitted).
- Amplify and split the incoming signal two ways so both base stations receive at once.
- Monitor status reports from both base stations to identify faults and swap over the online base station if required.
- Switch the antenna via internal coaxial relay duplexer to the online base station transmitter and inhibit the offline base station from transmitting.
- Switch the Serial data port through to the online base station.

An optocoupler based switch in the hot standby controller directs data to and from the serial Data Port on the rear panel directly to the serial Data Port on the on-line base station without any involvement from the Hot Standby controller microcontrollers (apart from selecting the on-line base). This provides protection to the system from failure of the microcontroller.

As well as the Data Port, each base has a system port. The system port of each base station is interfaced to the microcontroller on the Hot Standby controller. This allows the microcontroller in charge of selecting the base station to receive diagnostic messages from each base station to decide which is best.



Warning - RF Exposure (5 watt version)

The radio equipment described in this user manual emits low level radio frequency energy. The concentrated energy may pose a health hazard depending on the type of antenna used. In the case of:

Non-directional antenna - DO NOT allow people to come within 0.5 metres (20 inches) of the antenna when the transmitter is operating

Directional antenna - DO NOT allow people to come within 6 metres (20 feet) of the antenna when the transmitter is operating.

Mounting and Environmental Considerations

The EH45e Hot Standby Base Station is housed as a 5RU 19" rack mounted set, encompassing 2 x 2RU Base Station units and 1 x 1RU Hot Standby Controller unit. The mounting holes on the front panels should be used to secure the units to the rack.

The unit should be mounted in a clean and dry location,

protected from water, excessive dust, corrosive fumes, extremes of temperature and direct sunlight. Please allow sufficient passive or active ventilation to allow the base stations heatsink to operate efficiently.

All permanent connections are made at the rear of the unit. This includes: Power, Antenna, Communications Ports, Digital I/O, Ethernet Ports and System Port. The front panel has an additional System Port connection point for easy access.

The Base Station front panel system ports must not be used while in this Hot Standby configuration.



Warning - System Port Priority

On the front of the EH there are 3 system ports (1 on each unit). Only the hot standby controller's system port should be used to communicate with the system (programming and/or diagnostics).

If the front panel base station system ports are used, then it will cause the hot standby controller to change over or fail a base station. This is because the important internal system communications between the base and the hot standby controller through the rear sockets become disconnected when the base station's front panel system port is used.

Compliance Information

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, equipment may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient to relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different to that which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for assistance.

IC Notice

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la class B est conforme a la norme NBM-003 du Canada.


Communication Ports

The Data Port and System Ports of each Base Station connect directly to the Hot Standby Controller units corresponding ports with the cables provided. Ensure all clamping screws on the Data Port cables are firmly secured and the System Port cables are clipped in correctly. See figure below for further details.

Note: Only the front or rear user System Port can be used at any one time on the HSC.

Note: RF Connectors not used for ETSI version

The Hot Standby Controller units data ports connect directly to your application devices if required and the System Port connects directly to your local PC. See E-Series Ethernet User manual for further wiring instructions.

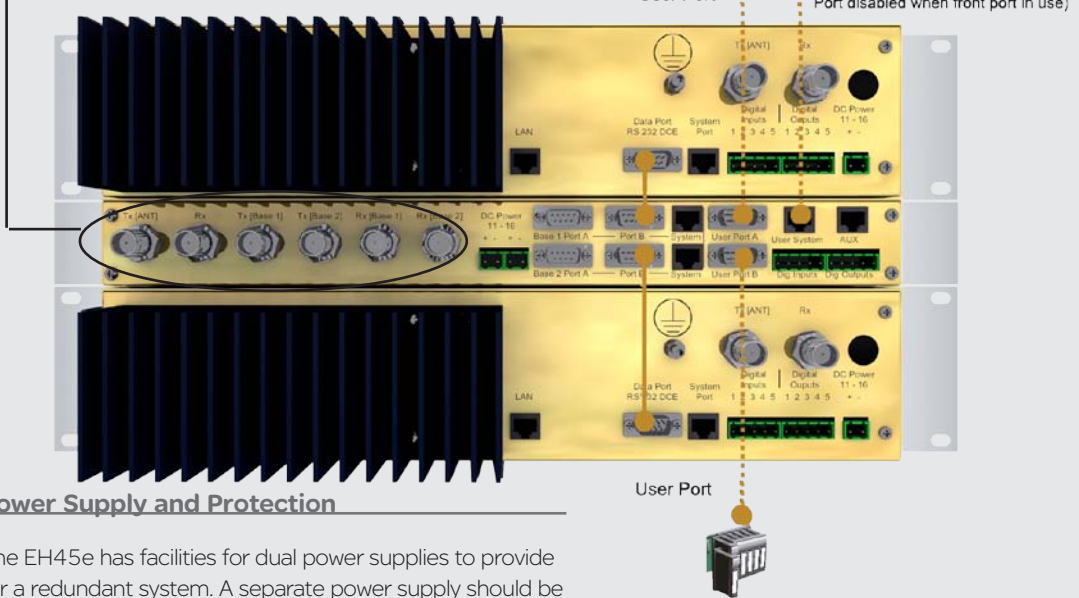


Power Supply and Protection

The EH45e has facilities for dual power supplies to provide for a redundant system. A separate power supply should be used for each of the Base Station units. The Hot Standby Controller unit has connections for dual power supplies and it is recommended that the power supplies from each of the Base Stations also be used to power the Hot Standby Controller unit. See Figure below for further details.

See E-Series Ethernet User manual for further wiring instructions.

Note: RF Connectors not used for ETSI version

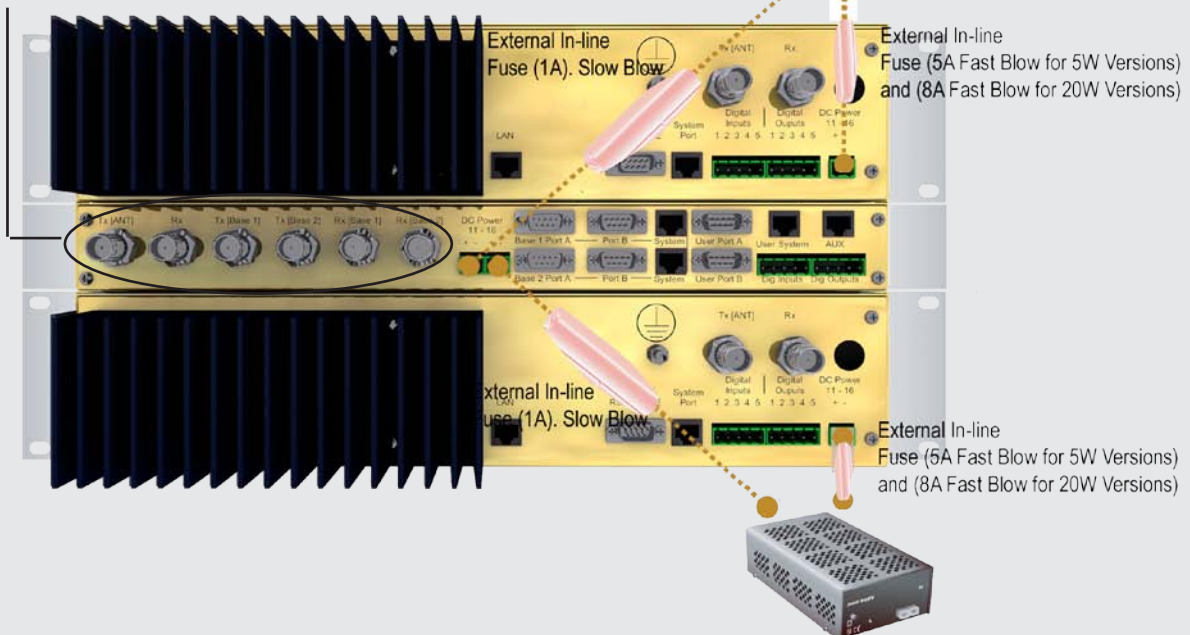

Connection options for Ethernet Interfacing

There are two recommended options when an external Ethernet interface is required to be connected to a Hot Standby arrangement. The Hot Standby Controller does not provide any Ethernet (LAN) connections.

Option A – Separate connection to each EB Ethernet Base. In some situations, particularly where RTUs with redundant Ethernet ports are involved, an external device can be connected to both EB Base Stations. Detection of which base is online is the responsibility of the RTU.





Option B – Connection using switch or router. Both EB Ethernet Base units are connected to the switch/router which shall route traffic to the online base.



Connecting Antennas and RF Feeders

There are 3 primary antenna connection options. All connectors used are standard N Type sockets. See figures below for further details.

See E-Series Ethernet User manual for further wiring instructions.

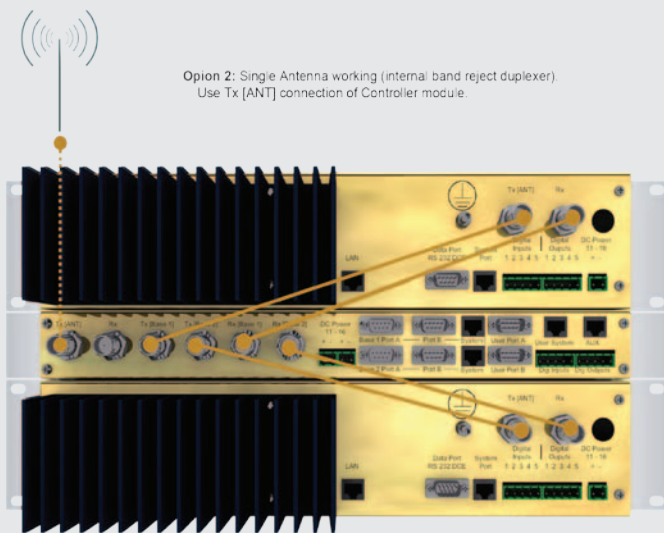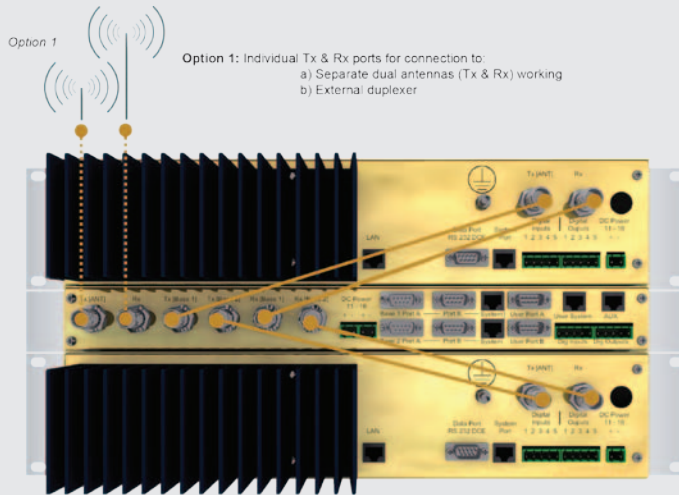

Front Panel Operation



Switches

Select Switch

The 3 position switch (1 / Auto / 2) on the front panel provides the following functionality:

- Position 1: base station 1 is forced into operation
- Position Auto: changeover hardware will select the on-line base station
- Position 2: base station 2 is forced into operation

The select switch is also used to identify the target base station for configuration programming.

Adjacent to the select switch are two LEDs: These LEDs indicate the current active base station.

Select LEDs

- Green - Auto Mode
- Red - Remote Force
- Amber - Local Force

2 Green Firmware Download Mode

2 Amber Test Mode

2 Red Fatal Error - refer user manual

Reset Switch

This is a momentary close switch which when depressed will reset all LED alarm indications.

System Port

There are two system port connection points, one on the rear panel and one on the front panel. Both have the same functionality and can be used for local diagnostics, firmware front panel downloads and hot standby controller testing. To access the system port use the diagnostic/programming cable.

Note: When connection is made to front panel system port, rear system port is disabled.

Alarm Status LEDs

There are 10 alarm LEDs on the front panel, five for base 1 and five for base 2. These LEDs provide a general indication of base station status. More detailed base station status information is available by using the diagnostic utility software.

The indicated alarms for each base station are:

Freq.	=>	Frequency Error
RxSig	=>	Receive Signal (RF) Error
Data	=>	Receive Data Error
TxPower	=>	Transmit Power (RF) Error
Supply	=>	DC Voltage Error

The status of each alarm is represented as follows:

Off	=>	Unknown
Green	=>	No Error
Red	=>	Current (active) Error condition
Amber	=>	Recovered Error condition

Any active or recovered error LEDs will turn to green after the reset alarms switch has been pushed or remotely reset.

E-mail Technical Support

When e-mailing questions to our support staff, make sure you tell us the exact model number (and serial number if possible) of the Trio equipment you are working with. Include as much detail as possible about the situation, and any tests that you have done which may help us to better understand the issue. If possible, please include your telephone contact information should we wish to further clarify any issues.

Contact Details

Technical Support: Europe, Africa, Middle East

Available: Monday to Friday 8:30am - 5:30pm
Central Europe Standard Time

Direct Worldwide: +31 (71) 579 1650
Email: euro-support@controlmicrosystems.com

Technical Support: The Americas

Available: Monday to Friday 8:00am - 6:30pm
Eastern Standard Time

Toll free within North America: 1-888-226-6876
Direct Worldwide: +1 (613) 591-1943
Email: technicalsupport@controlmicrosystems.com

Technical Support: Asia Pacific

Available: Monday to Friday 8:30am - 5:30pm
Australian Eastern Standard Time

Direct Worldwide: +61 3 8773 0100
Email: support@triodatacom.com



Issue: 10-11

Information subject to change without notice.
© Copyright 2011 Trio Datacom Pty Ltd. All rights reserved.